

Standard GST Flail Mowers | Delivery & First-use Guide

Arrival, unpacking, startup, remote-control checks, and first-use guidance for GST-800, GST-1000, and GST-1200 standard flail machines.

On-arrival checks

- Inspect crate condition, tie-down condition, and lifting points before unloading.
- Confirm machine model, charger, remote control, and supplied tools against the packing list before startup.
- Check visible fasteners, deck condition, flail area, and track condition before the machine enters service.

Before first startup

- Confirm engine fuel, engine oil, battery voltage, and switch positions.
- For diesel routes, follow the air-filter and startup notes in the supplied operator manual.
- Keep the area clear before testing movement, lift/height control, and blade engagement.

Remote-control checks

- C7 routes: confirm power, pairing, forward/reverse, steering, and work controls before cutting.
- Industrial remote routes: confirm power, pairing, movement, accessory control, emergency-stop behaviour, and any configured lift/height functions.
- Do not move into field work until the correct control package and startup logic are confirmed.

First-use sequence

- Run the engine at a stable idle or controlled mid-throttle before testing the work deck.
- Check deck engagement, stop sequence, and battery/charging behaviour after a short controlled run.
- After first use, recheck fasteners, belt area, flail area, and visible service points.

Packed-delivery reference

Model	Packed size	Packed weight
GST-800	162 x 104 x 103 cm	398 kg
GST-1000	162 x 122 x 103 cm	415 kg
GST-1200	162 x 143 x 103 cm	432 kg